



P/N:LBW-AM06-PAM-6G18G-50B

Твердотельный усилитель мощности для ЭМС
300 Вт, 6 ГГц - 18 ГГц

Характеристики:

- Коэффициент усиления: 75 дБ (тип.)
- Выходная мощность: 55 дБм (тип.)
- Напряжение питания: 220 В
- Согласованный вход/выход 50 Ом



Области применения:

- Микроэлектроника и спутниковая связь
- Телекоммуникационная инфраструктура

Parameter	Min.	Typ.	Max.	Units
Frequency Range		6-18		GHz
Gain		75		dB
Gain flatness		±5.0		dB
Gain Variation Over Temperature (-40°C ~ +85°C)		±3.0		dB
Input VSWR		2.0		:1
Output 1dB Compression Point (P1dB)		50		dBm
Saturated Output Power (Psat)		55		dBm
Isolation S12		80		dB

Weight		Impedance	50ohms
Input / Output Connectors	N-Female	Material	Aluminum/copper
Finish	Standard: Gold 40 micron; Nickel 220 micron thickness	Package Sealing	Epoxy Sealing (Standard)
	Option: Gold 80 micron; Nickel 180 micron thickness		Hermetically Sealed (Option with extra charge)

Твердотельный усилитель мощности для ЭМС 300 Вт, 6 ГГц - 18 ГГц

Absolute Maximum Ratings

Supply Voltage	85-264VAC
RF Input Power (RFIN)	Psat-Gain

Biassing Up Procedure

Step 1	Connect input and output with 50 Ohm source/load. (in band VSWR<1.9:1 or >10dB return loss)
Step 2	Turn ON AC Power
Step 3	Follow Front Panel Instructions

Power OFF Procedure


Step 1	Turn OFF RF Output Power
Step 2	Turn OFF AC Power
Step 3	Disconnect Input and Output

Environmental Specifications


Operational Temperature	-40°C~+85°C (Case Temperature below 85°C)
Storage Temperature	-50°C~+105°C
Altitude	30,000 ft. (Epoxy Sealed Controlled environment)
	60,000 ft. 1.0psi min (Hermetically Sealed Uncontrolled environment) (Optional)
Vibration	25g RMS (15 degrees 2KHz) endurance, 1 hour per axis
Humidity	100% RH at 35°C, 95%RH at 40°C
Shock	20G for 11msec half sine wave, 3 axis both directions

Outline Drawing:

All Dimensions in mm (inches)

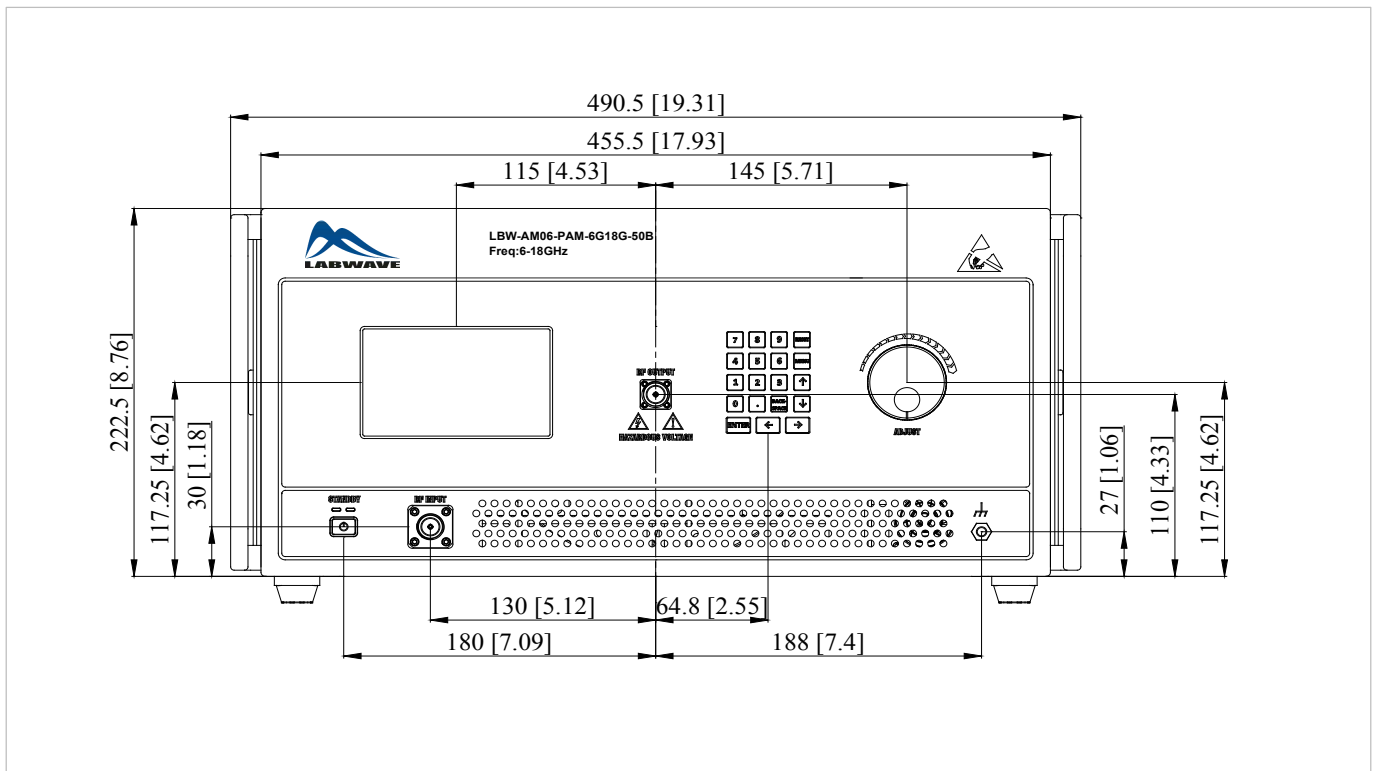

Твердотельный усилитель мощности для ЭМС 300 Вт, 6 ГГц - 18 ГГц

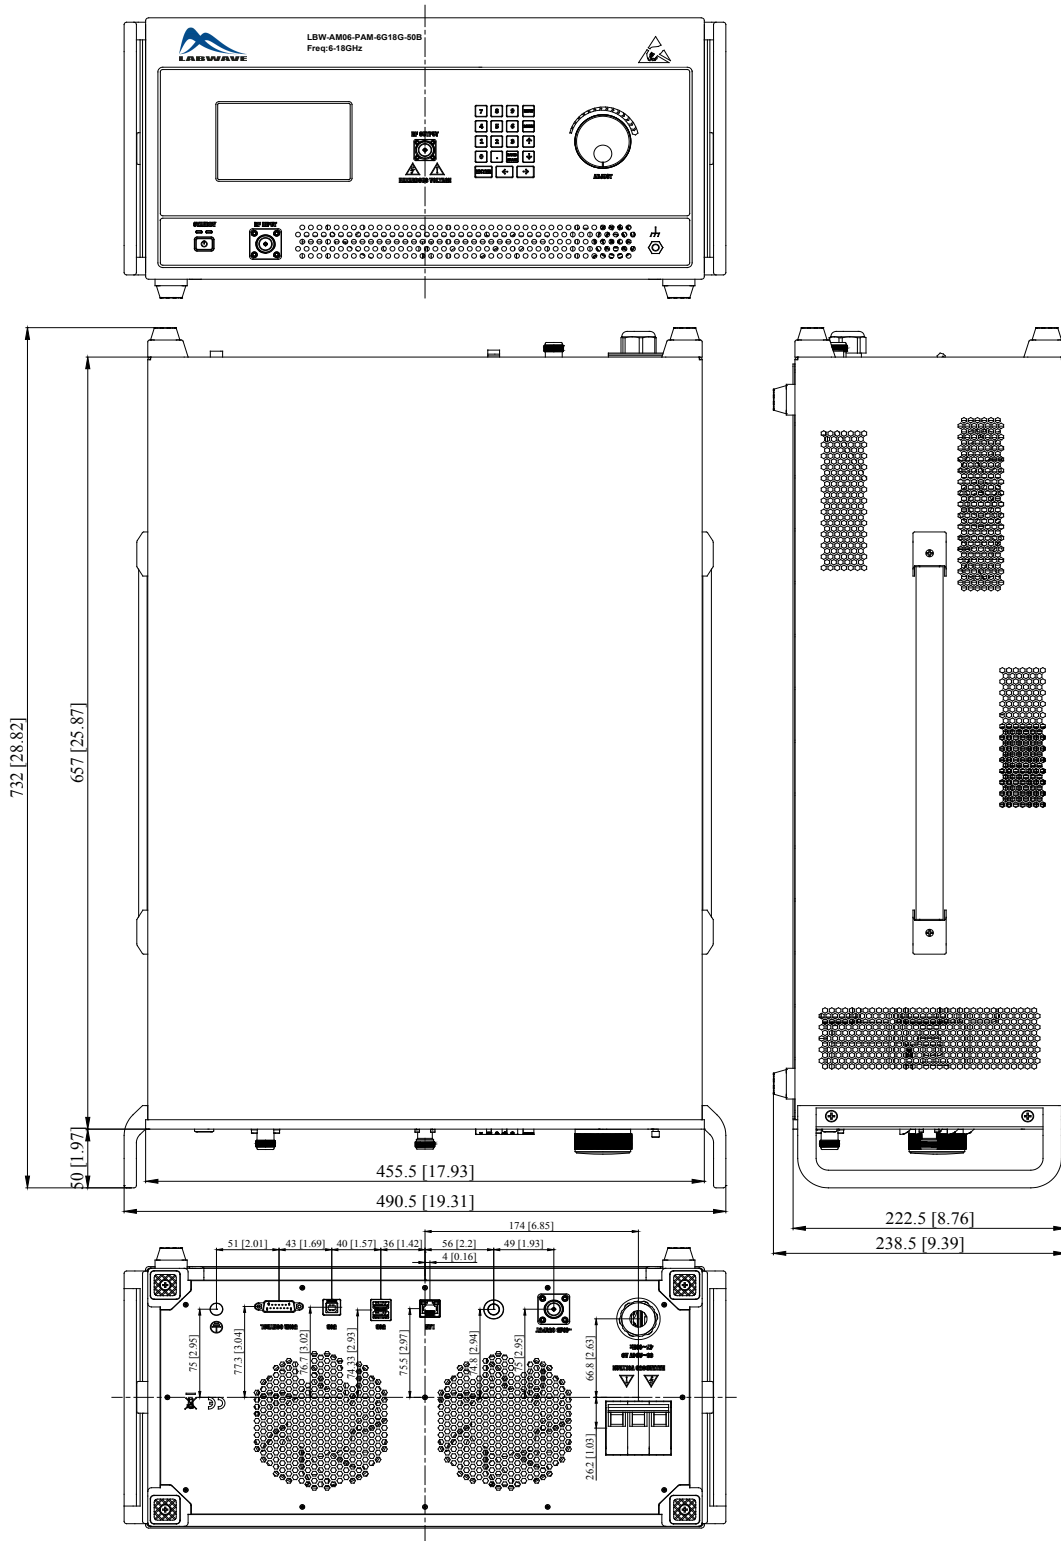


EMC Equipment User Manual

Front Panel



Rear Panel

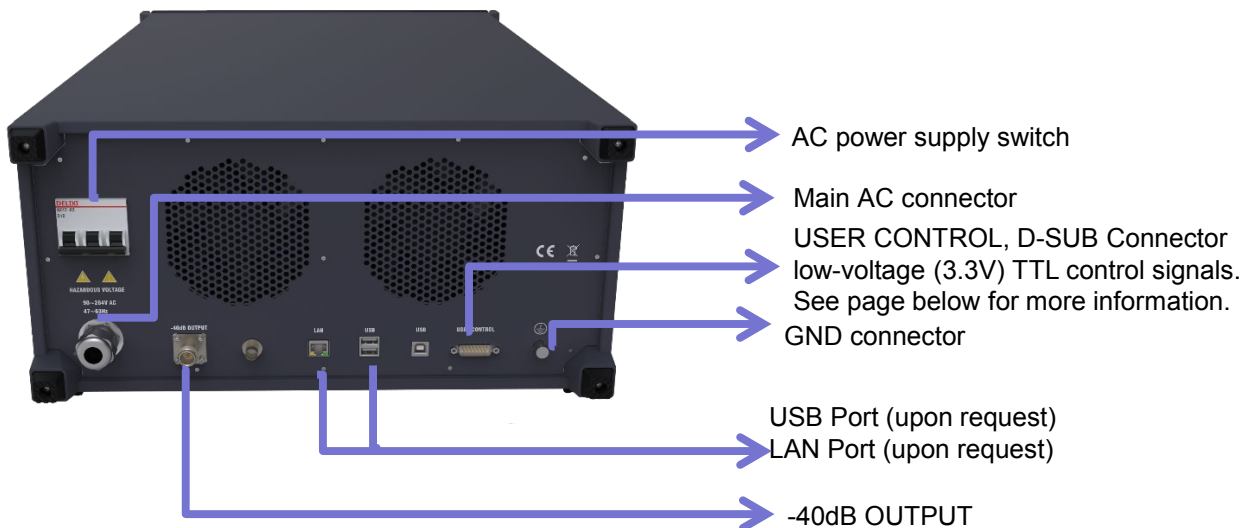


Front Panel LCD Screen Display

Switching On Instrument



Please follow the instructions on the front panel LCD screen after switching on the power. Press "1" on keypad to continue.

Self Calibration Screen


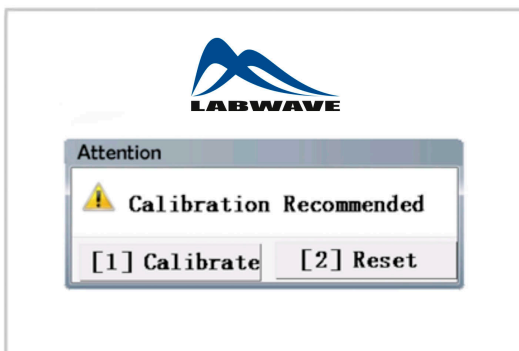


Calibration is may be recommended
"[1] Calibrate" to execute instrument self calibration process.

"[2] Reset" to reboot the instrument.

*Please turn OFF RF input power, and terminate the RF output port while applying calibration function


Instrument Protection Alarms

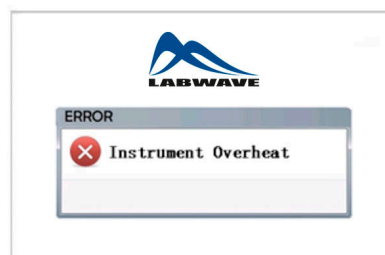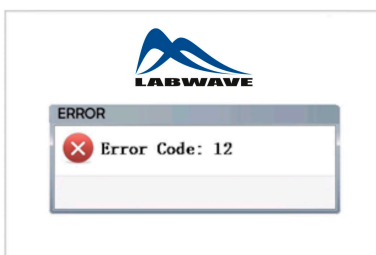

The front panel LCD screen will display the error code or error message when instrument self protection is triggered. Front panel alarm indicator will light up.

To eliminate the error code, press "RESET" on front panel keypad to reboot the instrument and clear the alarms.

Instrument Status Display Page

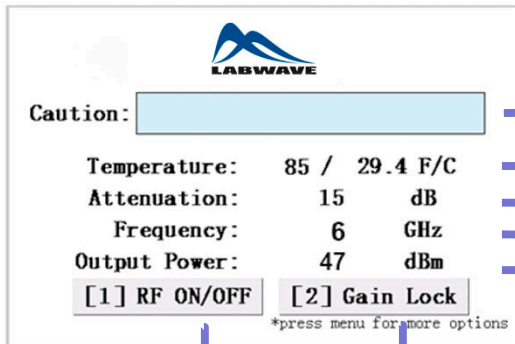

Indicates instrument RF output status. It will display:
Output is Ready to Turn on or RF Output is ON

Instrument temperature

RF output attenuation (change with adjustment knob)

RF input signal center frequency


Instrument RF output power

Press "Menu" on keypad to enter instrument functions selection menu

User can set a constant gain for the unit. Equipment will automatically adjust the gain at certain frequency

Switches On or Off for instrument RF output port

Instrument Function Selection Page

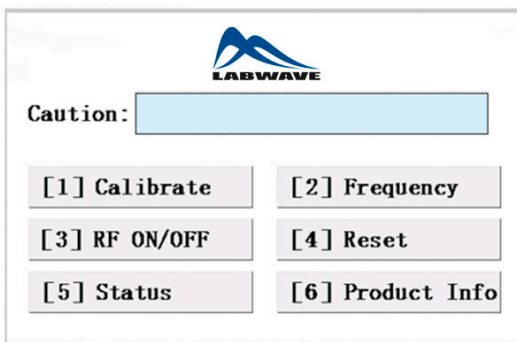

To enter this function selection page, press "Menu" on front panel keypad while the instrument is showing the status page. Press the corresponding number on front panel keypad to select:

"[1] Calibrate" calibrates the instruments.




"[2] Frequency" enters RF input signal center frequency.

"[3] RF ON/OFF" switches the RF output port on or off.

"[4] Reset" Restarts the instrument (Turns RF output off)


"[5] Status" enters instrument status display page.

"[6] Product Info" displays product part number and serial number

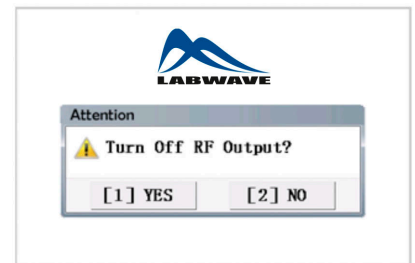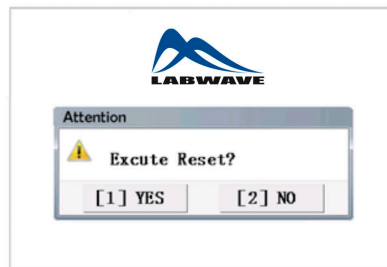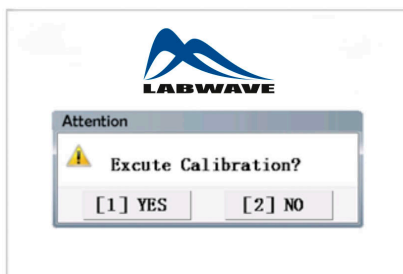

All action functions will ask for confirming execution when selected from function selection menu.

Protection Connector Table:

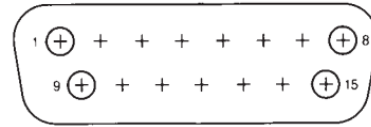

Pin #	Name	Function	Initial State	Description	Applied
1	Reset	Control		Resets PA when logic <u>LOW</u> is applied and released	Yes
2	Drain Disable	Control	LOW	Applying logic <u>HIGH</u> disables drains of amplifiers	Yes
3	Gate Disable	Control	LOW	Applying logic <u>HIGH</u> disables gates of amplifiers	Yes
4	RF IN Over	Indicator	LOW	Pin will be latched to logic <u>HIGH</u> when input signal is over limit	No
5	Temp Over	Indicator	LOW	Pin will be latched to logic <u>HIGH</u> when amplifier is driven over temperature	Yes
6	Current Over	Indicator	LOW	Pin will be latched to logic <u>HIGH</u> when drain current limit is reached	Yes
7	ID Imbalance	Indicator	LOW	Pin will be latched to logic <u>HIGH</u> when an imbalance in the drain current of the combining branches occurs	Yes
8	PA input power	Indicator		PA input power is represented by voltage	No
9	PA output power	Indicator		PA output power is represented by voltage	No
10	PA output reflection power	Indicator		PA output reflection power is represented by voltage	No
11	VSWR	Indicator	LOW	Pin will be latched to logic <u>HIGH</u> when output reflection is over limit	No
12	Temp Signal	Indicator		PA carrier case temperature is represented by voltage	Yes
13	+5V	Power Supply	+5V	+5V DC is supplied for reference	Yes
14	GND	Ground	GND	Ground	Yes
15	GND	Ground	GND	Ground	Yes

HIGH/LOW voltages are standard TTL signals:

0.0V-0.8V = LOW

2V-5V = HIGH